
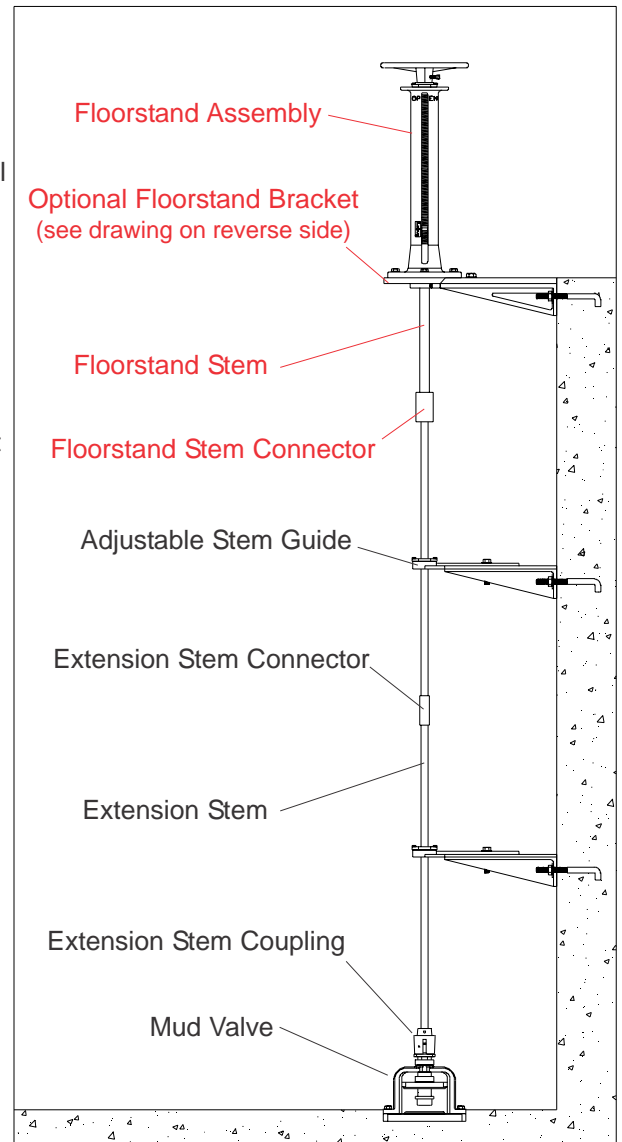


# TRUMBULL INDUSTRIES, INC.

1040 N. Meridian Rd., P.O. Box 1556, Youngstown, Ohio 44501 Phone: (330) 799-3333  
www.trumbull-mfg.com Toll Free: 1-800-677-1799 FAX: (330) 797-3215

## INDICATING FLOORSTAND

**Trumbull Indicating Floorstands** are designed for installation in treatment plants and pump stations to allow operation of valves at a lower elevation. Floorstand body is ductile iron for increased torque capacity. Our standard Floorstand is shown below; special mountings and stems are available. See reverse side for drawing of Floorstand and optional Floorstand Bracket.

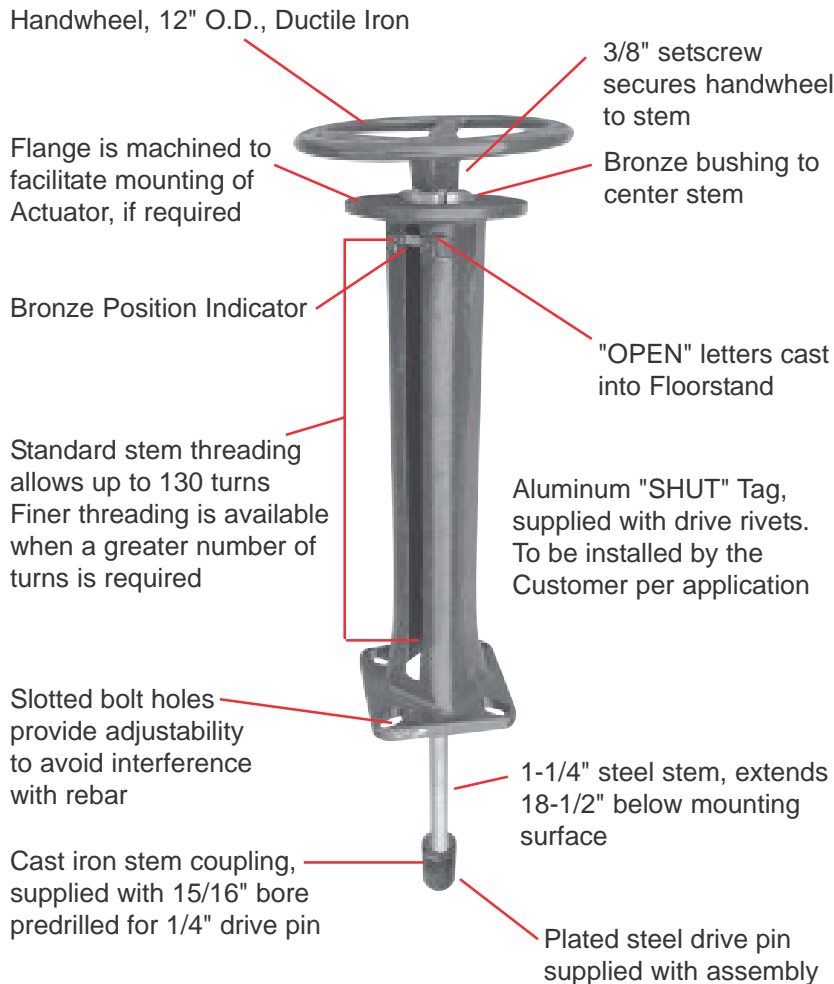



**Typical Floorstand installation.**

### Ordering Information:


1. Quantity.
2. Trumbull item number (#367-2420).
3. O.D. of connecting stem being used, or desired connector hole size (15/16" bore dia. supplied if not specified.)

See separate literature on Trumbull Floor Boxes, Extension Stems, Mud Valves and Stem Guides.

See reverse side for drawing.

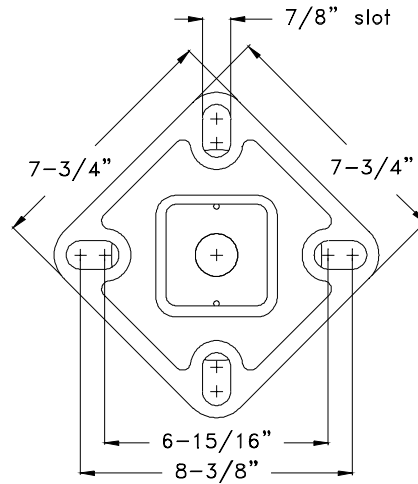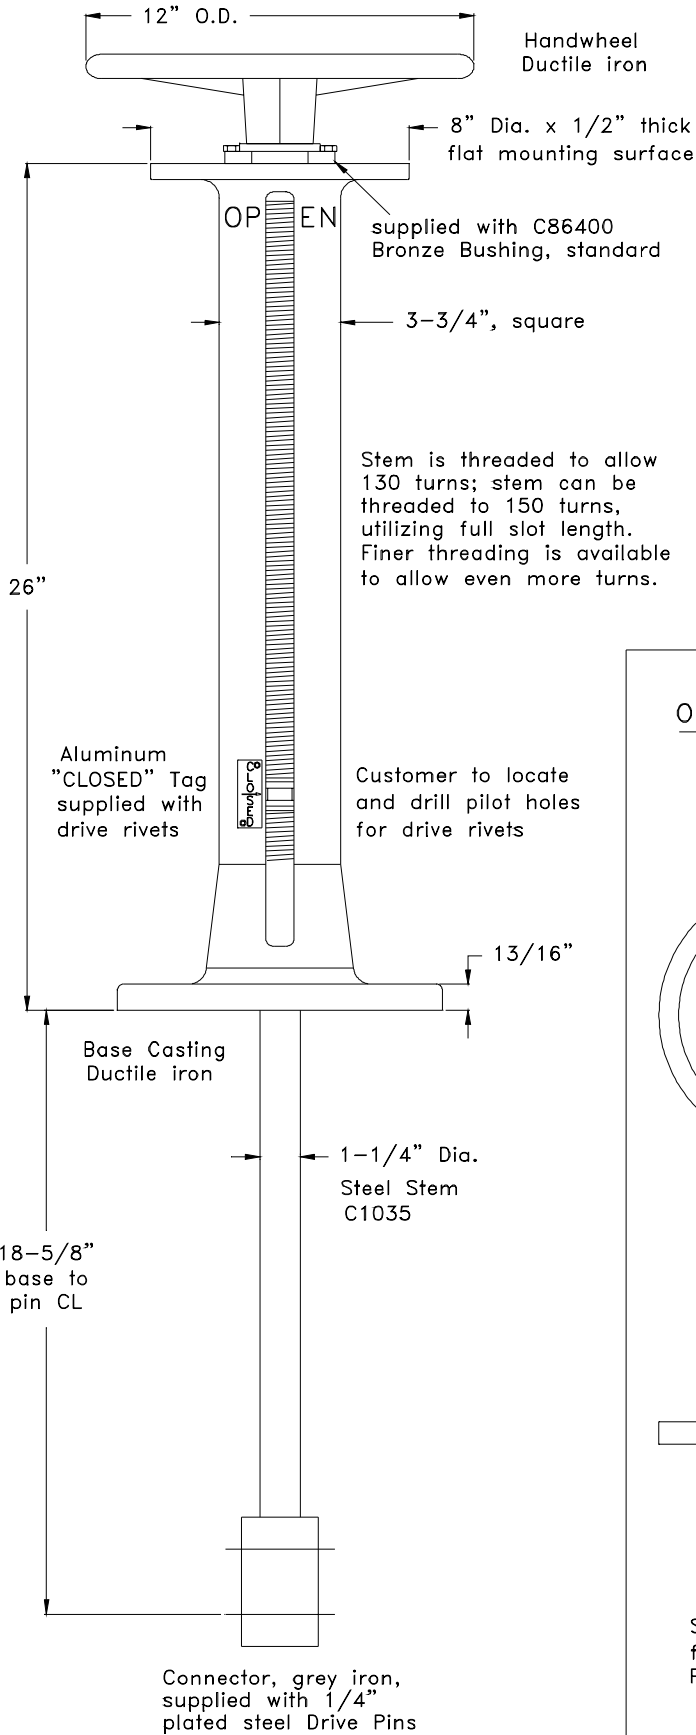

Floorstand Base Dimensions

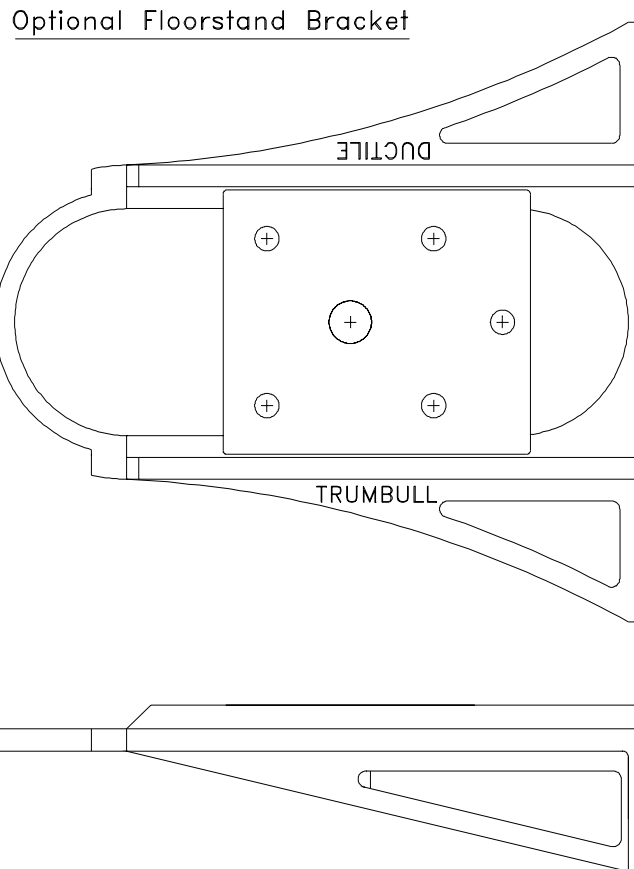

Standard configuration fits Trumbull Floorstand,  
for stems up to 17-1/4" from wall.  
For other applications, please inquire.

Drawn:	Drawing Revision:	<b>TRUMBULL INDUSTRIES</b> P.O. Box 1556 1040 N. Meridian Rd. Youngstown, Ohio 44501	Drawn to Scale
Date	Rev. Date		<b>INDICATING FLOORSTAND</b>
8/23/99	E 3/31/04		